



How to Re-String a Woven Wood shade with Continuous Loop Control option



Measure the length of the shade and add 10 inches to the length. A single cord is inserted into the SHAFT BRACKET

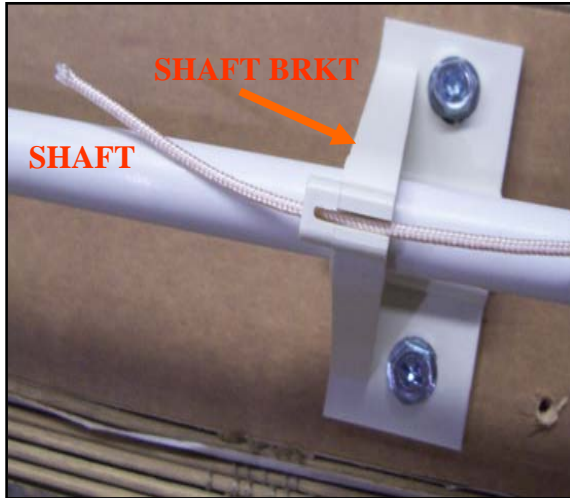

Make a knot and clip it with the “C” CLIP. Make certain the cords are inserted into the SHAFT in the same direction as the CLUTCH location.

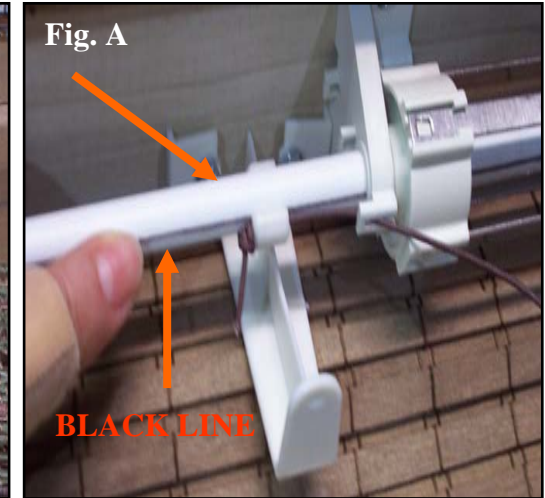

Insert the Cord through the GROMMET hole and Brass Rings. Make a knot at the end of every cord. Now you can install the shade. When the shade is in the fully lowered position even tension on all the cords.



Make certain all the cords are released from the SHAFT (See Fig. A) and all “C” CLIPS are aligning one another. If the cords are not aligned, then align them with the cord loop. Tie all cords and make certain the shade lifts up evenly, if not, untie until shade is even.